 


Programmable DC Power Supply

IT6900 Series Programming Guide

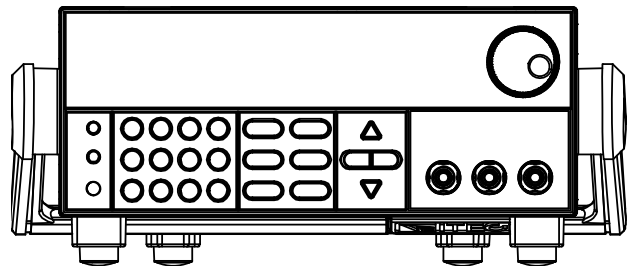

Model: IT6922A/IT6932A/IT6933A/IT6942A/
IT6952A/IT6953A/IT6922B/
IT6932B/IT6942B/IT6952B/IT6953B

Version: V2.0

Statement

© Itech Electronic, Co., Ltd. 2018
No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior permission and written consent from Itech Electronic, Co., Ltd. as governed by international copyright laws.

Manual Article No.

IT6900-402160

Revision

Revision 2, published on

Aug. 31st, 2018

Itech Electronic, Co., Ltd.

Trademark Statement

Pentium is a registered trademark of Intel Corporation in the United States.

Microsoft, Visual Studio, Windows and MS Windows are trademarks of Microsoft Corporation in the United States and/or other countries/regions.

Guarantee

Materials in the document are provided *talīs qualīs* and may be changed in future revisions without prior notice. In addition, within the maximum allowable extent of laws, ITECH is not committed to any explicit or implied guarantee for this manual and all information therein, including but not limited to the implied guarantee on marketability and availability for some special purposes. ITECH shall not be responsible for any error or incidental or indirect losses caused by the provision, use or application of this documents and information therein. If some guarantee clauses in other written agreements between ITECH and users are not consistent with clauses herein, those clauses in other written agreements shall prevail.

Technology license

Hardware and/or software in this document cannot be provided without a license and can only be used or copied according to the license.

Restricted permission statement

Restricted permissions of the U.S. government. Permissions for software and technical data which are authorized to the U.S. Government only include those for custom provision to end users. ITECH follows FAR 12.211 (technical data), 12.212 (computer software). DFARS 252.227-7015 (technical data--commercial products) for national defense and DFARS 227.7202-3 (permissions for commercial computer software or computer software documents) while providing the customized business licenses of software and technical data.

Safety Statement

CAUTION

“Caution” signs indicate danger. It is required to pay attention to the contents of these signs during implementation of operations.

The damage to the product or loss of important data may be caused in case of improper operation steps or failure to follow operation steps. Do not continue to implement any improper operation indicated in “Caution” signs when the specified conditions are not fully understood or these conditions are not satisfied.

WARNING

“Warning” indicates danger. It is required to pay attention to the contents of these signs during implementation of operation steps. Personal casualties may be caused in case of improper operation steps or failure to follow these operation steps. Do not continue to implement any improper operation indicated in “Warning” signs when the specified conditions are not fully understood or these conditions are not satisfied.



Note

“Instructions” indicates operation instructions. It is required to refer to the contents of these signs during operation steps. These signs are used for providing tips or supplementary information for operators.

Certification and Quality Assurance

IT6900 series power supply completely reaches nominal technical indicators in the manual.

Warranty Service

ITECH Company will provide one-year warranty services for the product materials and manufacturing (excluding the following limitations).





 
 






- When warranty service or repair is needed, please send the product to the service unit specified by ITECH Company.
- When the product is sent to ITECH Company for warranty service, the customer must pay the one-way freight to the maintenance department of ITECH, and ITECH will be responsible for return freight.
- If the product is sent to ITECH for warranty service from other countries, the customer will be responsible for all the freight, duties and other taxes.



Limitation of Warranty

This Warranty will be rendered invalid in case of the following:

- Damage caused by circuit installed by customer or using customer own products or accessories;
- Product which has been modified or repaired by the customer;
- Damage caused by circuit installed by customer or not operating our products under designated environment;
- The product model or serial number is altered, deleted, removed or made illegible by customer;
- Damage caused by accidents, including but not limited to lightning, water, fire, abuse or negligence.

Safety Signs

	Direct current		ON (power on)
	Alternating current		OFF (power off)
	Both direct and alternating current		Power-on state
	Protective conductor terminal		Power-off state
	Earth (ground) terminal		Reference terminal
	Caution, risk of electric shock		Positive terminal

	Warning, risk of danger (refer to this manual for specific Warning or Caution information)	—	Negative terminal
	Frame or chassis terminal	-	-

Safety Precautions

General safety precautions below must be followed in each phase of instrument operation. In case of failure to follow these precautions or specific warnings in other parts of the manual, violation against the safety standards related to the design, manufacture and purpose of the instrument will occur. If the user does not follow these precautions, ITECH will bear no responsibility arising there from.

WARNING

- The power supply is provided with a three-core power cord during delivery and should be connected to a three-core junction box. Before operation, be sure that the power supply is well grounded.
- Use electric wires of appropriate load. All loading wires should be capable of bearing maximum short-circuit of electronic load without overheating.
- Ensure the voltage fluctuation of mains supply is less than 10% of the working voltage range in order to reduce risks of fire and electric shock.
- To prevent burnout, please pay special attention to positive and negative polarities of power supply during connection!
- Do not use damaged equipment. Please check the housing before using the equipment. Check whether the instrument is subject to cracking or is lack of plastic. Do not operate the instrument in the environment with explosive gas, steam or dust.
- Observe all tags on the equipment before connection.
- Do not install alternative parts on the instrument or perform any unauthorized modification.
- Do not use the equipment when the removable cover is dismantled or loose.
- Please use the power adapter supplied by the manufacturer to avoid accidental injury.
- We do not accept responsibility for any direct or indirect financial damage or loss of profit that might occur when using the instrument.
- This instrument is used for industrial purposes. Do not apply this product to IT power supply system.
- Do not use the equipment on the life support system or other equipment with safety requirements.

CAUTION

- If the equipment is not used in the manner specified by the manufacturer, its protection may be damaged.
- Always use dry cloth to clean the equipment housing. Do not clean the inside of the instrument.
- Do not block the air vent of the equipment.

Environmental Conditions

The IT6900 series power supply can only be used indoors or in low condensation areas. The following table shows general environmental requirements for this instrument.



Environmental conditions	Requirement
Operating temperature	0°C - 40°C
Operating humidity	20% - 80% (non condensing)
Storage temperature	-20°C - 70 °C
Altitude	Operating up to 2,000 meters
Installation category	II
Pollution degree	Pollution degree 2




Note

To make accurate measurements, allow the instrument to warm up for 30 min before operation.

Regulation Tag

	The CE mark indicates that the product complies with all the relevant European legal directives. The specific year (if any) affixed refers to the year when the design was approved.
	The instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard the electrical/electronic product in domestic household waste.

	<p>This symbol indicates the time period during which no hazardous or toxic substances are expected to leak or deteriorate during normal use. The expected service life of the product is 10 years. The product can be used safely during the 10-year Environment Friendly Use Period (EFUP). Upon expiration of the EFUP, the product must be immediately recycled.</p>
---	--

Waste Electrical and Electronic Equipment (WEEE)

Directive



Waste electrical and electronic equipment (WEEE) directive, 2002/96/EC

The product complies with tag requirements of the WEEE directive (2002/96/EC). This tag indicates that the electronic equipment cannot be disposed of as ordinary household waste.

Product Category

According to the equipment classification in Annex I of the WEEE directive, this instrument belongs to the "Monitoring" product.

If you want to return the unnecessary instrument, please contact the nearest sales office of ITECH.

Compliance Information

Complies with the essential requirements of the following applicable European Directives, and carries the CE marking accordingly:

- Electromagnetic Compatibility (EMC) Directive 2014/30/EU
- Low-Voltage Directive (Safety) 2014/35/EU

Conforms with the following product standards:

EMC Standard

IEC 61326-1:2012/ EN 61326-1:2013 ¹²³

Reference Standards

CISPR 11:2009+A1:2010/ EN 55011:2009+A1:2010 (Group 1, Class A)

IEC 61000-4-2:2008/ EN 61000-4-2:2009

IEC 61000-4-3:2006+A1:2007+A2:2010/ EN 61000-4-3:2006+A1:2008+A2:2010

IEC 61000-4-4:2004+A1:2010/ EN 61000-4-4:2004+A1:2010

IEC 61000-4-5:2005/ EN 61000-4-5:2006

IEC 61000-4-6:2008/ EN 61000-4-6:2009

IEC 61000-4-11:2004/ EN 61000-4-11:2004

1. The product is intended for use in non-residential/non-domestic environments. Use of the product in residential/domestic environments may cause electromagnetic interference.
2. Connection of the instrument to a test object may produce radiations beyond the specified limit.
3. Use high-performance shielded interface cable to ensure conformity with the EMC standards listed above.

Safety Standard

IEC 61010-1:2010/ EN 61010-1:2010

Content

Certification and Quality Assurance	i
Warranty Service	i
Limitation of Warranty	i
Safety Signs	i
Safety Precautions	ii
Environmental Conditions	iii
Regulation Tag	iii
Waste Electrical and Electronic Equipment (WEEE) Directive	iv
Compliance Information	v
Chapter1 Remote Control	1
1.1 Overview	1
1.2 SCPI Command Introduction	1
1.3 Command Type of SCPI	1
1.4 Command Format	3
1.5 Data Type	6
1.6 Remote Operation	7
1.6.1 RS232 interface	7
1.6.2 USB interface	9
1.6.3 GPIB interface	9
1.6.4 RS485 interface	9
Chapter2 SCPI Status Register	12
Chapter3 System Commands	15
STATus:QUEStionable[:EVENT]?	15
STATus:QUEStionable:CONDition?	15
STATus:QUEStionable:ENABle <enabled value>	16
SYSTem:VERSion?	16
SYSTem:ERRor?	17
SYSTem:REMote	17
SYSTem:LOCal	17
SYSTem:RWLock	18
SYSTem:BEEPer	18
SYSTem:COMMunicate:GPIB:RDEvice:ADDRes	18
SYSTem:INTerface	19
Chapter4 Display Commands	20
DISPlay	20
DISPlay:TEXT < Reference value>	20
DISPlay:TEXT:CLEar	20
Chapter5 Trigger Commands	22
TRIGger	22
TRIGger:SOURce	22
Chapter6 Output Commands	23

OUTPut.....	23
OUTPut:TIMer	23
OUTPut:TIMer:DATA.....	23
Chapter7 Current Control Commands.....	25
CURRent {<current value> MINimum MAXimum UP DOWN DEF}	25
CURRent:STEP	26
CURRent:TRIG{<current value> MINimum MAXimum}.....	26
[SOURce:]CURRent:PROTection[:LEVel]	27
[SOURce:]CURRent:PROTection:STATe	27
[SOURce:]CURRent:PROTection:TRIPed?	28
[SOURce:]CURRent:PROTection:CLEAr	28
Chapter8 Voltage Control Commands.....	29
VOLTage {<volts> MINimum MAXimum UP DOWN DEF}	29
VOLTage:STEP {<value> DEFault}.....	30
VOLT:TRIG{<volts> MINimum MAXimum}.....	30
VOLT:PROTection {<volts> MINimum MAXimum}	31
VOLT:PROTection:STATe {0 1 OFF ON}.....	31
VOLT:PROTection:TRIPed?	32
VOLT:PROTection:CLEAr	32
VOLT:LIMIT <volts>	32
Chapter9 Control Commands.....	33
APPLy {<voltage value> DEF MIN MAX} [, {<current value> DEF MIN MAX}]	33
ADDR	33
Chapter10 Measurement Commands	34
MEASure:CURRent?	34
FETCh:CURRent?	34
MEASure[:VOLTage]?.....	34
FETCh[:VOLTage]?.....	34
MEASure:POWer?	35
FETCh:POWer?	35
MEASure:DVM?.....	35
FETCh:DVM?.....	35
Chapter11 List Commands.....	37
LIST:FUNCTion.....	37
LIST:STEP	37
LIST:VOLTage.....	37
LIST:CURRent	38
LIST:TIMEr	38
LIST:SAVE	39
LIST:LOAD	39
LIST:REPet.....	40
Chapter12 IEEE488.2 Commands.....	41

*CLS.....	41
*ESE.....	41
*ESR?.....	42
*IDN?.....	42
*OPC.....	42
*PSC.....	43
*RST.....	43
*SRE <enabled value>.....	44
*STB?.....	44
*TRG.....	45
*SAV.....	45
*RCL.....	46
*TST?.....	46

Chapter1 Remote Control

1.1 Overview

This chapter will provide following remote configuration introductions:

- SCPI Command Introduction
- Command type
- Command format
- Data format
- Remote Operation

 
1.2 SCPI Command Introduction

SCPI is short for Standard Commands for Programmable Instruments which defines a communication method of bus controller and instrument. It is based on ASCII and supply for testing and measuring instruments. SCPI command is based on hierarchical architecture which also known as tree system. In this system, Relevant Command is returned to a common node or root, so that a subsystem is formed.

1.3 Command Type of SCPI

SCPI has two types of commands, common and subsystem.

- Common commands generally are not related to specific operation but to controlling overallelectronic load functions, such as reset, status, and synchronization. All commoncommands consist of a three-letter mnemonic preceded by an asterisk: *RST *IDN? *SRE 8.
- Subsystem commands perform specific electronic load functions. They are organized into an inverted tree structure with the "root" at the top. The following figure shows a portion of a subsyste command tree, from which you access the commands located along the various paths.

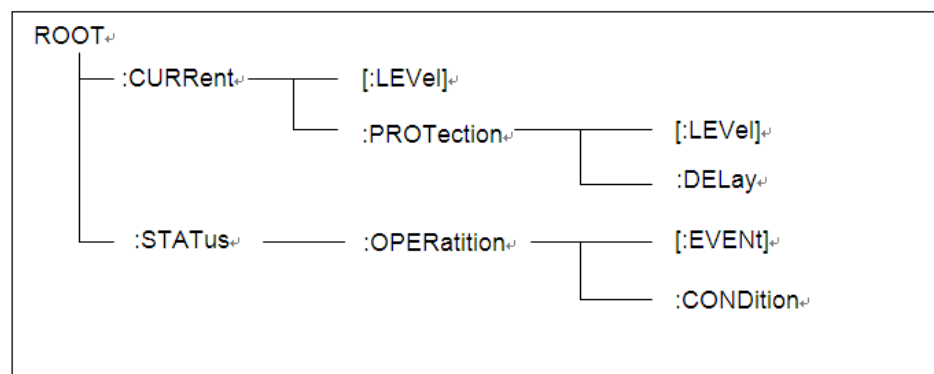

Multiple commands in a message

Multiple SCPI commands can be combined and sent as a single message with one message terminator. There are two important considerations when sending several commands within a single message:

- Use a semicolon to separate commands within a message.
- Head paths influence how the instrument interprets commands.

We consider the head path as a string which will be inserted in front of every command of a message. As for the first command of a message, the head path is a null string; for each subsequent command, the head path is a string which is defined to form the current command until and including the head of the last colon separator. A message with two combined commands: `CURR:LEV 3;PROT:STAT OFF`

The example indicates the effect of semicolon and explains the concept of head path. Since the head path is defined to be "CURR" after "curr: lev 3", the head of the second command, "curr", is deleted and the instrument explains the second command as: `CURR:PROT:STAT OFF`. If "curr" is explicitly included in the second command, it is semantically wrong. Since combining it with the head path will become "CURR:CURR:PROT:STAT OFF", resulting in wrong command.

Movement in the subsystem

In order to combine commands from different subsystems, you need to be able to reset the header path to a null string within a message. You do this by beginning the command with a colon (:), which discards any previous header path. For example, you could clear the output protection and check the status of the Operation Condition register in one message by using a root specifier as follows:

```
PROTection:CLEAr;:STATus:OPERation:CONDition?
```

The following message shows how to combine commands from different subsystems as well as within the same subsystem:

```
POWER:LEVel 200;PROTection 28; :CURRent:LEVel 3;PROTection:STATe ON
```

Note the use of the optional header `LEVel` to maintain the correct path within the voltage and current subsystems, and the use of the root specifier to move between subsystems.

Including Common Commands

You can combine common commands with subsystem commands in the same message. Treat the common command as a message unit by separating it with a semicolon (the message unit separator). Common commands do not affect the header path; you may insert them anywhere in the message.

```
VOLTage:TRIGgered 17.5;:INITialize;*TRG
```

OUTPut OFF;*RCL 2;OUTPut ONIT872X-3X SCPI Communication protocol 17

Case sensitivity

Common commands and SCPI commands are not case sensitive. You can use upper or lower for example:

*RST = *rst

:DATA? = :data?

:SYSTem:PRESet = :system:preset

Long-form and short-form versions

A SCPI command word can be sent in its long-form or short-form version. The command subsystem tables in Section 5 provide the in the long-form version. However, the short-form version is indicated by upper case characters. Examples:

:SYSTem:PRESet long-form

:SYST:PRES short form

:SYSTem:PRES long-form and short-form combination

Note that each command word must be in long-form or short-form, and not something in between.

For example, :SYSTe:PRESe is illegal and will generate an error. The command will not be executed.

Query

Observe the following precautions with queries:

- Set up the proper number of variables for the returned data. For example, if you are reading back a measurement array, you must dimension the array according to the number of measurements that you have placed in the measurement buffer.
- Read back all the results of a query before sending another command to the electronic load. Otherwise a Query Interrupted error will occur and the unreturned data will be lost.

1.4 Command Format

Formats for command display are as follows:

[SOURce[1|2]:]VOLTage:UNIT {VPP|VRMS|DBM}

[SOURce[1|2]:]FREQuency:CENTer

{<frequency>|MINimum|MAXimum|DEFault}

Based on the command syntax, most commands (and certain Parameter) are expressed in both upper and lower cases. Upper case refers to abbreviation of commands. Shorter program line may send commands in abbreviated format. Long-format commands may be sent to ensure better program readability.

For example, both formats of VOLT and VOLTAGE are acceptable in the above syntax statements. Upper or lower case may be used. Therefore, formats of VOLTAGE, volt and Volt are all acceptable. Other formats (such as VOL and VOLTAG) are invalid and will cause errors.

- Parameter options with given command strings are included in the brace ({}). The brace is not sent along with command strings.
- Vertical stripes (|) separate several parameter options with given command strings. For example, {VPP|VRMS|DBM} indicates that you may assign "APP", "VRMS" or "DBM" in the above commands. Vertical stripes are not sent along with command strings.
- Angle brackets (< >) in the second example indicates that a value must be assigned to the parameter in the brace. For example, the parameter in the angle bracket is <frequency> in the above syntax statements. Angle brackets are not sent along with command strings. You must assign a value (such as "FREQ:CENT 1000") to the parameter, unless you select other options displayed in the syntax (such as "FREQ:CENT MIN").
- Some syntax elements (such as nodes and Parameter) are included in square brackets ([]). It indicates that these elements can be selected and omitted. Angle brackets are not sent along with command strings. If no value is assigned to the optional Parameter, the instrument will select a default value. In the above examples, "SOURce[1|2]" indicates that you may refer to source channel 1 by "SOURce" or "SOURce1" or "SOUR1" or "SOUR". In addition, since the whole SOURce node is optional (in the square bracket), you can refer to the channel 1 by omitting the whole SOURce node. It is because the channel 1 is the default channel for SOURce language node. On the other hand, if you want to refer to channel 2, "SOURce2" or "SOUR2" must be used in the program line.

Colon (:)

It is used to separate key words of a command with the key words in next level. As shown below:

```
APPL:SIN 455E3,1.15,0.0
```

In this example, APPLy command assigns a sine wave with frequency of 455 KHz, amplitude of 1.15 V and DC offset of 0.0 V.

Semicolon (;)

It is used to separate several commands in the same subsystem and can also minimize typing. For example, to send the following command string:

```
TRIG:SOUR EXT; COUNT 10
```

has the same effect as sending the following two commands:

```
TRIG:SOUR EXT
TRIG:COUNT 10
```

Question mark (?)

You can insert question marks into a command to query current values of most Parameter. For example, the following commands will trigger to set the count as 10:

```
TRIG:COUN 10
```

Then, you may query count value by sending the following command:

```
TRIG:COUN?
```

You may also query the allowable minimum or maximum count as follows:

```
TRIG:COUN?MIN
```

```
TRIG:COUN?MAX
```

Comma (,)

If a command requires several Parameter, then a comma must be used to separate adjacent Parameter.

Space

You must use blank characters, [TAB] or [Space] to separate Parameter with key words of commands.

Generic commands (*)

Execute functions like reset, self inspection and status operation. Generic commands always start with an asterisk (*) and occupy 3 character sizes, including one or more Parameter. Key words of a command and the first parameter are separated by a space. Semicolon (;) can separate several commands as follows:

```
*RST; *CLS; *ESE 32; *OPC?
```

Command terminator

Command strings sent to the instrument must end with a <Newline> (<NL>) character. IEEE-488 EOI (End or Identify) information can be used as <NL> character to replace termination command string of <NL> character. It is acceptable to place one <NL> after a <Enter>. Termination of command string always resets current SCPI command path to root level.

NOTE

As for every SCPI message with one query sent to the instrument, the instrument will use a <NL> or newline sign (EOI) to terminate response of return. For example, if "DISP:TEXT?" is sent, <NL> will be placed after the returned data string to terminate response. If an SCPI message includes several queries separated by semicolon (such as "DISP?;DISP:TEXT?"), <NL> will terminate response returned after response to the last query. In all cases, the program must read <NL> in response before another command is sent to the instrument, otherwise errors will be caused.

1.5 Data Type

SCPI language defines several data types used for program message and response messages.

- Numerical parameter

Commands requiring numerical Parameter support the notations of all common decimal notations, including optional signs, decimal points, scientific notation, etc. Special values of numerical Parameter are also acceptable, such as MIN, MAX and DEF. In addition, suffixes for engineering units can also be sent together with numerical Parameter (including M, k, m or u). If the command accepts only some specific values, the instrument will automatically round the input Parameter to acceptable values. The following commands require numerical Parameter of frequency value:

[SOURce[1|2]:]FREQuency:CENTer {<Frequency>|MINimum|MAXimum}

- Discrete parameter

Discrete Parameter are used for settings with limited number of programming values (such as IMMEDIATE, EXTERNAL or BUS). They can use short and long format like key words of commands. They may be expressed in both upper and lower case. The query response always returns uppercase Parameter in short format. The following commands require discrete Parameter in voltage unit:

[SOURce[1|2]:]VOLTage:UNIT {VPP|VRMS|DBM}

- Boolean parameter

Boolean Parameter refer to true or false binary conditions. In case of false conditions, the instrument will accept "OFF" or "0". In case of true conditions, the instrument will accept "ON" or "1". In query of Boolean settings, the instrument will always return "0" or "1". Boolean Parameter are required by the following commands:

DISPlay {OFF|0|ON|1}

- ASCII string Parameter

String Parameter may actually include all ASCII character sets. Character strings must start and end with paired quotation marks; and single quotation marks or double quotation marks are both allowed. Quotation mark separators may also act as one part of a string, they can be typed twice without any character added between them. String parameter is used in the following command:

DISPlay:TEXT <quoted string>

For example, the following commands display message of "WAITING..." (without quotation marks) on the front panel of the instrument.

DISP:TEXT "WAITING..."

Single quotation marks may also be used to display the same message.

DISP:TEXT 'WAITING...'

1.6 Remote Operation

IT6900A series power supply has three standard communication interface: RS232, USB, GPIB, and IT6900B series power supply has four standard communication interface: RS232, USB, GPIB, RS485. The user can choose any one of them to implement a communication with the computer.


 


NOTE

If the programming commands involve modifying the setting of the instrument, such as setting the voltage value or executing the ***CLS** command, the **SYST:REM** command must be executed after completing the communication connection and setting of the instrument and the host computer. Otherwise, the instrument is still in the Local state, and some query commands (such as ***IDN?**) are still executable and will generate a return value. Commands that modify the instrument state and parameters (such as ***CLS**) must be executed in the Remote state.


 
If you execute the ***CLS** command in Local mode, the system will prompt the error message with the code -200. You can execute **SYSTem:ERRor?** command one or more times to read out the stored error information to clear the error message queue, then the **Error** on the VFD of the instrument will be cleared.

1.6.1 RS232 interface


 
There is a DB9 connector at the rear of the power supply, when connect to computer, you need to connect a cable with COM port on both side. To active connection, you need to set the front panel composite key  +  key configuration settings the same as computer configuration settings. RS-232 interface can be used to program all of the SCPI orders.




 
NOTE

The RS232 settings must match the settings in front panel system information. If any change, please press  +  key.

RS-232 data format

RS-232 data is a 10-bit words which has a start bit and a stop bit. The start bit and stop bit cannot be edited. However, you can select the parity items with  +  key on the front panel. Parity options are stored in nonvolatile memory.

Baud Rate

 
The front panel  +  button allows the user to select a baud rate

which is stored in the non-volatile memory: 4800 /9600/ 19200 /38400/ 57600 /115200.

RS-232 connection cable

Use a RS232 cable with DB-9 interface, RS-232 serial port can connect with the controller (e.g. PC). Do not use blank Modem cable.

If your computer is using a RS-232 interface with DB-25 connector, you need an adapter cable with a DB-25 connector at one end and the other side is a DB-9(not blank modem cable)

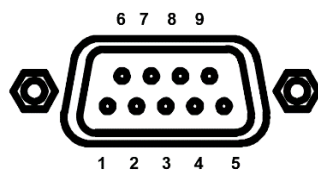

RS232 Pins of Plug

Base pin number	Description
1	No conjunction
2	TXD, data transmission
3	RXD, data receiving
4	No conjunction
5	GND, grounding
6	No conjunction
7	CTS, clear to send
8	RTS, request to send
9	No conjunction

RS-232 Troubleshooting:

If there is RS-232 connection problem, check the following:

- Computer and power supply must configure the same baud rate, parity, data bits and flow control options. Note that the power configuration as a start bit and a stop bit (these values are fixed).
- As described before in RS-232 connector, you must use the correct interface cable or adapter. Note that even if the cable has the right plug, the internal wiring may be wrong.
- Interface cable must be connected to the correct serial port on the computer (COM1, COM2, etc.).

Communication Settings

Before communication, you should first make the following parameters of power supply and PC matches.

Baud Rate: 9600 (4800,9600,19200,38400,57600,115200). You can enter the system menu from the front panel, and then set the baud rate.

Calibration (none, even, odd)

EVEN	8 data bits, have even parity
ODD	8 data bits have odd parity
NONE	8 data bits, no parity

Mode: SIGNAL, MUX

SIGNAL (Single connection mode)

MUX (Multiple connection mode) ADDR: Local address (0 to 30, the factory default setting is 0)

Start Bit	8 Data Bits	Parity=None	Stop Bit
-----------	-------------	-------------	----------

1.6.2 USB interface

Use a Cable with two USB port to connect the power and the computer. All power functions can be programmed via USB.

The USB488 interface functions of the power supply described as below:

- Interface is 488.2 USB488 interface.
- Interface Receiver REN_CONTROL, GO_TO_LOCAL, and LOCAL_LOCKOUT request.
- Interface receive MsgID = TRIGGER USBTMC order information, and will pass TRIGGER order to the functional layer.

Power USB488 device functions described as follows:



- Devices can read all of the mandatory SCPI orders.
- Device is SR1 enabled.
- Device is RL1 enabled.
- Device is DT1 enabled.

1.6.3 GPIB interface

First, Connect the GPIB interface on the power supply and the GPIB card on computer via IEEE488 bus, must be full access and tighten the screws. Then set the address, the address range of the power : 0 to 30,


 
can set by the function key on the front panel, press the  +  key

to enter the system menu function, find the GPIB address setting by

 button, type the address,  key to confirm. GPIB address is stored in nonvolatile memory line.

1.6.4 RS485 interface

IT6922B/IT6932B/IT6942B/IT6952B/IT6953B power supply, via the RS485 interface, provides multi-unit control function for up to 30 units (If connecting more than 10 units, add a 120Ω resistor terminator to the last unit). On the front

panel, press  (Shift)+  keys to enter into the system menu, and the related setting is the same as the RS232 communication setting.

User can set the following parameters of the RS485 interface:

Baud rate: 9600(4800/9600/19200/38400/57600/115200)

Parity and data bit: NONE/8BIT, EVEN/8BIT, ODD/8BIT

- EVEN 8 data bits, have even parity
- ODD 8 data bits have odd parity
- NONE 8 data bits, no parity

Mode: SIGNAL (Single connection mode)


MUX (Multiple connection mode) ADDR: Local address (0 to 30, the factory default setting is 0)


Start Bit	8 Data Bits	Parity=None	Stop Bit
-----------	-------------	-------------	----------

To set the multi-unit connection mode, access the system Menu→SYST SET→COMM→RS485→MODE→MUX, to turn on the chain mode.

Set each unit with a different Address (0 to 30). Then by using RS485, connect the first power supply in the chain to a PC. Now, multiple units daisy-chained via RS485 can be controlled by one PC by using the commands specific for multi-unit connection. See “Programming Guide” section for details.

The figure below is a schematic diagram of the connection of 4 machines.

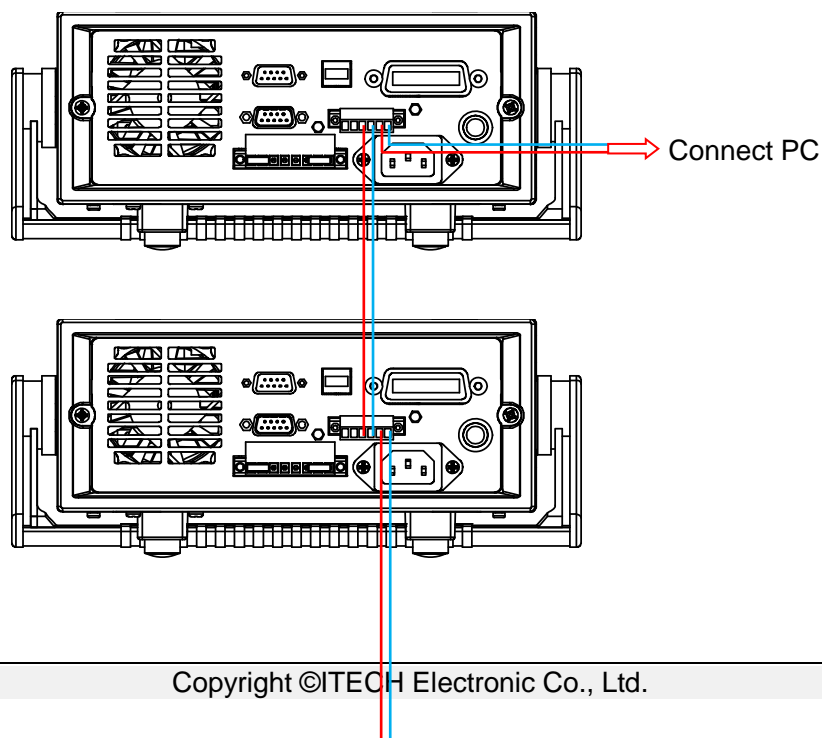 

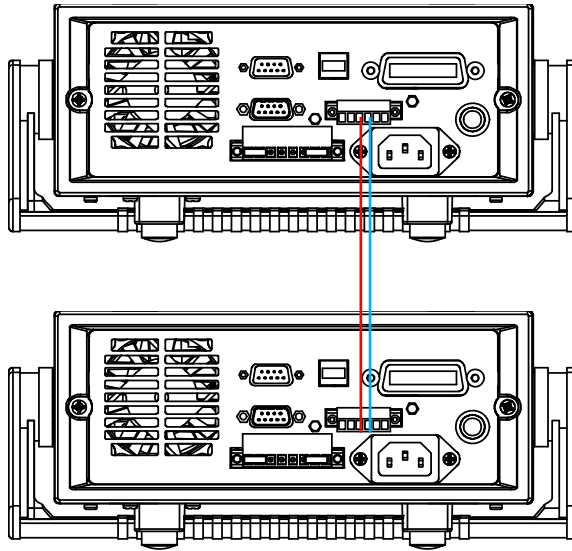 

Chapter2 SCPI Status Register

IT6900A series power records variable instrument status via three kinds of status register, the three kinds of registers are standard event register, query status register and status bytes register. Status byte register records the information of other status registers.

Event register is read only register, used to store the implementation status of the power, the data used in the event register latches in the form, once the data is stored, subsequent data will be completely ignored. Even cannot be changed by re-setting order (* RST) or equipment restart.

but if query the data in event register or send clear order *CLS (clear status), the event register will be automatically cleared. The main content which the standard event register records is:

Whether power output is turned on, order syntax errors, order execution errors, self-test or calibration errors, query errors and so on.

Bit	Decimal Value	Definition	
0	OPC	1	Operation Complete. All commands prior to and including an *OPC command have been executed.
1	Not Used	0	Always set to 0.
2	QYE	4	Query Error. The power supply tried to read the output buffer but it was empty. Or, new command line was received before a previous query had been read. Or, both the input and output buffers are full.
3	DDE	8	Device Error. A self-test or calibration error occurred (see error numbers 601 through 750 in chapter 5).
4	EXE	16	Execution Error. An execution error occurred (see error numbers -211 through -224 in chapter 5).
5	CME	32	Command Error. A command syntax error occurred (see error numbers -101 through -178 in chapter 5).
6	Not Used	0	Always set to 0.
7	PON	128	Power On. Power has been turned off and on since the last time the event register was read or cleared

Query status register provide some information of the power, such as over voltage, over temperature, over current, you can also monitor the

change of the constant current and voltage status via the register, for example, data bit 0 is the constant voltage mode of the power supply, data bit 1 is constant current mode of the power supply, and so on.


Bit		Decimal Value	Definition
0	CV	1	The power supply is/was in the constant voltage mode.
1	CC	2	The power supply is/was in the constant current mode.
2-3	Not used	0	Always set to 0.
4	Over temperature	16	The fan has a fault condition.
5-8	Not used	0	Always set to 0.
9	Over voltage	512	The overvoltage protection circuit has tripped.
10	Over Current	1024	The over current protection circuit has tripped.
11-15	Not used	0	Always set to 0.

Status byte register records the information of other registers. The query data is temporally stored in the output buffer of the power supply, and feedback to customer through BIT4 bit. The data bits in Status byte group will not be latched, when the information in event register is changed, the corresponding bit in status byte register will subsequently be changed.


Bit		Decimal Value	Definition
0-1	Not used	0	Always set to 0.
2	EAV	4	Error buffer available
3	QUES	8	One or more bits are set in the questionable status register (bits must be “enabled” in the enable register).
4	MAV	16	Data is available in the power supply output buffer.
5	ESB	32	One or more bits are set in the standard event register (bits must be “enabled” in the enable register).
6	RQS	64	The power supply is requesting service (serial poll).
7	Not used	0	Always set to 0.

The below picture will give you more detailed information:

 
Questionable Status

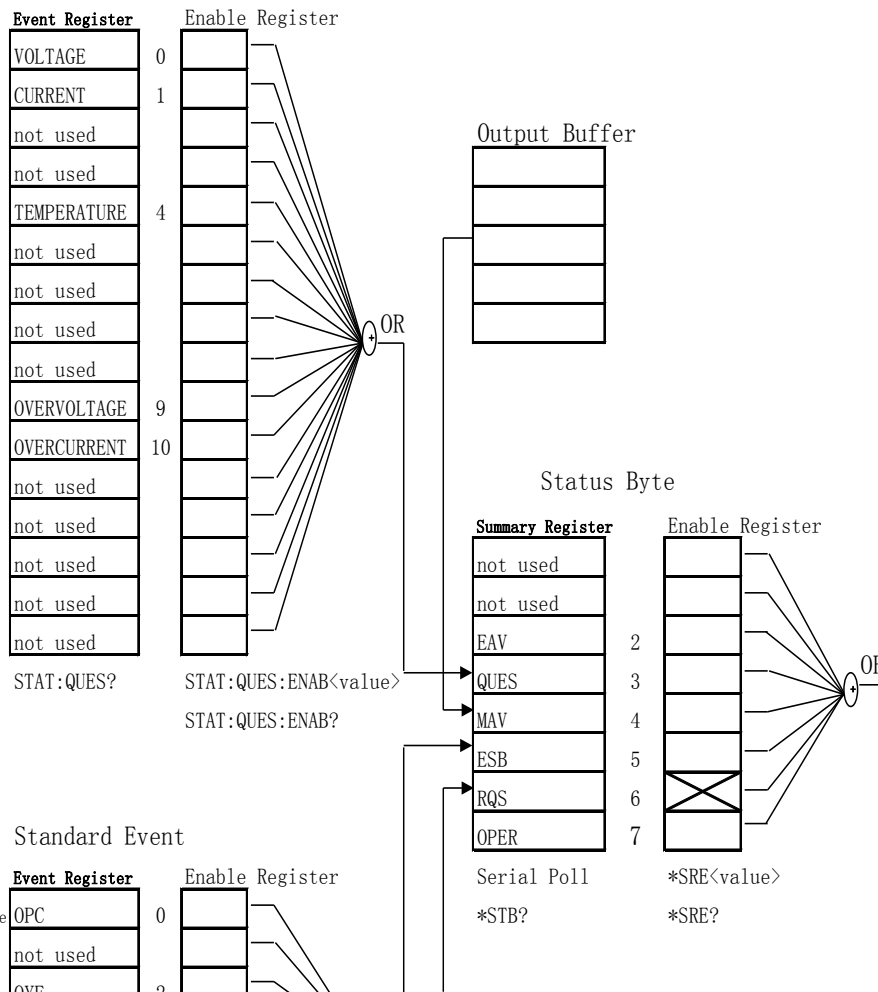

Standard Event

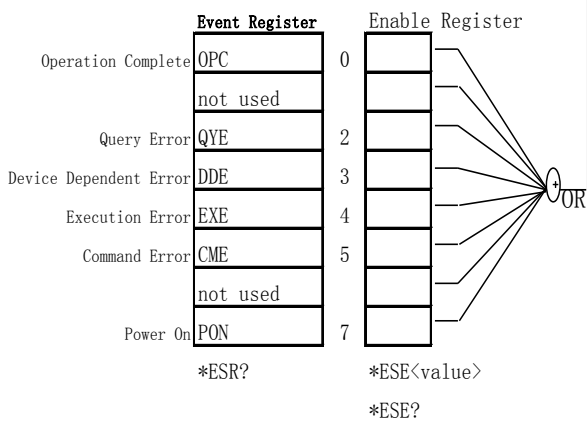 

Operate Event

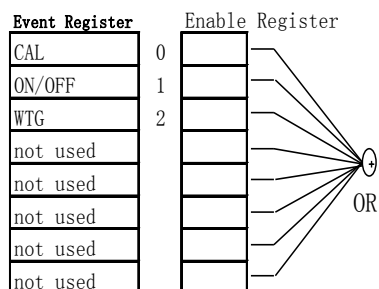 

Chapter3 System Commands

STATus:QUEStionable[:EVENT]?

This order can read the parameter from quest event register. the power supply will return a decimal number which is corresponding to the binary weighted sum of each bit of the register, these bits have been latched. After executing, quest event register is reset.

Quest syntax:

STATus:QUEStionable[:EVENT]?

Parameter:

None

Return parameter:

<NR1>

Reference order:

STATus:QUEStionable:ENABle

STATus:QUEStionable:CONDition?

This order can be used to read the value of query condition register and to get the status of the power, if it is CC or CV. The power supply will return a decimal number corresponding to the binary-weighted sum of each bit of the register. These bits are not latched. If 0 is returned, then the output status of the power is OFF or uncertain. If 1 is returned, then the status is CV mode, if 2 is returned, then the status is CC. If 3 is returned, then there is error occurred.

Quest syntax:

STATus:QUEStionable:CONDition?

Parameter:

None

Return parameter:

<NR1>

STATus:QUEStionable:ENABle <enabled value>

This order can set the parameter of quest event enable register. The power supply will return a decimal number which is the binary-weighted sum of the enable register.

Order syntax:

STATus:QUEStionable:ENABle <NRf>

Parameter:

0 to 65535

Reset value:

Consult *PSC order

Example:

STATus:QUEStionable:ENABle 16

Quest syntax:

STATus:QUEStionable:ENABle?

Return parameter:

<NR1>

Reference order:

*PSC

SYSTem:VERSion?

This order can query the version of the SCPI order. Returned value is a string like "YYYY.V", In which the YYYY is the year of this version, V is the version.

Order syntax:

SYST:VERS?

Parameter:

None

Return parameter:

<NR2>

Example:

1.00, 1991.1

SYSTem:ERRor?

This order is used to query the error information of the power supply. When the error LED lights on the front panel, it tells us that there is one or more hardware or order syntax error happened. There are at most 20 groups of error message. Send the order once will read one error message from the error queue.

- Error messages follow the FIFO (first-in-first-out) principle. The first error will be returned first. when you read all the error tips information in the error queue. The ERROR led will turn off. When error occur the buzzer of the power supply will beep once.
- If more than 20 errors occurred, the last one stored in the queue will be replaced by “-350”, Meaning "too many mistakes.". If the error messages in the error message queue are not read out, the error following will not be saved to the queue. If there is no error message, when read error information, it will return “+0”, meaning “no error”.
- If turn off the power supply or send *CLS (clear status) order, the error messages in the error queue will be cleared. *RST order will not clear the error messages in the error queue.

Order syntax:

SYSTem:ERRor?

Parameter:

None

SYSTem:REMOte

This order is used to set the power supply to remote control mode through the RS232 interface. Except for the Local key on the front panel, other keys are locked and can't be used. Send or receive orders without first sending the order to configure the remote control may cause unpredictable results.

Order syntax:

SYST:REM

Parameter:

None

Quest syntax:

None

SYSTem:LOCal

This order is used to set the power supply to panel control mode through the

RS232 interface. After execute this order, all the buttons on the front panel can be used.

Order syntax:

SYST:LOC

Parameter:

None

Quest syntax:

None

SYSTem:RWLock

This order is used to set the power supply to remote control mode through the RS232 interface, and LOCAL is not available too. Executing this order will set the power supply to remote control mode ,the same result as order SYST:REM function, the only difference is this order will lock all the buttons on the front panel including LOCAL button.

Order syntax:

SYST:RWL

Parameter:

None

SYSTem:BEEPer

This order is used to test the beeper, after execute this order, the power supply will issue a beep sound.

Order syntax:

SYSTem:BEEPer[:IMMEDIATE]

Example:

SYST:BEEP

SYSTem:COMMunicate:GPIB:RDEvice:ADDRESS

This order is used to set the GPIB communication address.

Order Syntax:

SYSTem:COMMunicate:GPIB:RDEvice:ADDRESS <NR1>

Parameter:

0-30

Quest syntax:**SYSTem:COMMunicate:GPIB:RDEvice:ADDRess?****Returned parameter:**

<NR1>

SYSTem:INTerface

This order is used to switch the communication interface.

Order syntax:**SYSTem:INTerface <GPIB|USB|RS232>**

Chapter4 Display Commands

DISPlay

This order is used to turn on/off the VFD display. When the display is off, the output and will not be displayed on the VFD, at the same time, all the LED except for ERROR led will not be off. When the control mode is local, the display will turn on automatically, press LOCAL button can switch the control mode from remote to local.

Order syntax:

DISPlay[:WINDow][:STATe] <bool>

Parameter:

0|1|OFF|ON

Example:

DISPlay 1

Quest syntax:

DISPlay?

Returned parameter:

0|1

DISPlay:TEXT <Reference value>

This order is used to display a text on the VFD. TA message can display up to 12 characters, extra characters will be ignored. Commas, periods and semicolons will not be treated as a separate character but will be contained to the character before and display.

Order syntax:

DISPlay[:WINDow]:TEXT[:DTAT]

Quest syntax:

DISPlay:TEXT?

DISPlay:TEXT:CLEAr

This order is used to clear the text displayed on the front panel.

Order syntax:

DISPlay[:WINDow]:TEXT:CLEAr

Chapter5 Trigger Commands

TRIGger

This order is used to generate a trigger signal when trigger source is in BUS mode. The function of this order is similar to *TRG.

Order syntax:

TRIGger[:IMMEDIATE]

Parameters:

none

Related orders:

*TRG TRIG:SOUR

TRIGger:SOURce

This order is used to choose the source of trigger signal. Power supply can receive the signal from front panel by pressing Trigger button. Or receive a trigger signal by BUS. When you execute order *RST, the trigger mode should be set in MANUAL.

Order syntax:

TRIG:SOUR <mode>

Parameters:

BUS|MANUAL

Query syntax:

TRIGger:SOURce?

*RST value:

BUS|MANUAL

Chapter6 Output Commands

OUTPut

This order is used to open or close the output of power supply. When output is off, the voltage and current of power supply is 0V/1mA.

Order syntax:

OUTPut[:STATe] <bool>

Parameters:

0|1|OFF|ON

Query syntax:

OUTPut?

***RST value:**

0|OFF

OUTPut:TIMer

This order is used to set the state of output timer.

Order syntax:

OUTPut:TIMer[:STATe] <bool>

Parameters:

0|1|OFF|ON

Query syntax:

OUTPut:TIMer?

OUTPut:TIMer:DATA

This order is used to set output timer's time.

Order syntax:

OUTPut:TIMer:DATA <NRf>

Parameters:

0-99999.9

Unit:

S

Query syntax:

OUTPut:TIMer:DATA?

Parameters:

<NRf>

Chapter7 Current Control Commands

CURRent {<current value>|MINimum|MAXimum|UP|DOWN|DEF}

This order is used to set the output current. No matter what the current range you select currently, the output current is subject to the newest setting value. Besides, MIN and MAX can be used as parameters. MIN represents 0A, MAX represents the max value of the current range. You may send CURR? MIN or CURR? MAX orders to quire the minimum and maximum current within the range. DEF represents default value, it also can be used to set value.

We can also send CURR UP and CURR DOWN orders to increase or decrease current, the stepping value should be set with order " CURR:STEP". If adjusted value has exceeded the current range, then error information will be return:error-222.

Oder syntax:

[SOUR:]CURR[:LEVel][:IMMediate][:AMPLitude] <NRf>

Parameters:

MIN to MAX

Unit:

A

***RST value:**

MIN

Query syntax:

CURRent? [MINimum|MAXimum]

Return parameters:

<NR2>

Example:

```
CURR:STEP 0.01 //set the stepping value to be 0.01A
CURR UP //enable the output current increase value one time
CURR:STEP 0.02 // set the stepping value to be 0.02A
CURR DOWN // enable the output current decrease value one time
```

CURRent:STEP

This order is used to service for CURR UP and CURR DOWN two orders. It can set the stepping value of current. Besides, CURR:STEP? DEF order can inquire the stepping resolution of current of this unit. For example, the stepping setting value is 0.01, it represents 10mA.

Order syntax:

[SOURce:]CURRent[:LEVel][:IMMediate]:STEP[:INCRement] <NRf>

Parameters:

MIN~MAX

*RST value:

the stepping resolution of current of this unit.

Query order:

CURRent:STEP?

Return parameters:

<NR2>

CURRent:TRIG{<current value>|MINimum|MAXimum}

This order is used to set a current to be triggered. At first, this current value is saved and only when receiving a trigger signal will the power supply output with this current value. Sending order CURRent will not affect the setting value in this order. Sending query order, unit will return the previous setting value. If customer does not utilize order **CURRent:TRIG** at the beginning, then the return parameters will be the value you set with order CURRent. CURR:TRIG? MAX or CURR:TRIG? MIN orders will let you know the max and min current you can set.

Order syntax:

[SOURce:]CURRent[:LEVel]:TRIGgered[:IMMediate][:INCRement] <NRf>

Parameters:

MIN to MAX

Unit:

A

Query syntax:

CURRent:TRIG? [MINimum|MAXimum]

Return parameters:

<NR2>

[SOURce:]CURRent:PROTection[:LEVel]

This command is used to set the upper limit current value of the overcurrent protection OCP. If the peak value of the output current is higher than the OCP upper limit, the output of the power supply will turn off and an alarm tone will be generated. After the overcurrent protection status occurs, the command **CURR:PROT:CLE** can be sent to clear the overcurrent protection status.

Order syntax:

[SOURce:]CURRent:PROTection[:LEVel]

Parameters:

MIN to MAX

Unit:

A

Query syntax:

[SOURce:]CURRent:PROTection[:LEVel]?

Return parameters:

<NR2>

[SOURce:]CURRent:PROTection:STATe

This command is used to enable or disable the OCP function, that is, set the overcurrent protection status.

Order syntax:

[SOURce:]CURRent:PROTection:STATe

Parameters:

0|1|OFF|ON

Query syntax:

[SOURce:]CURRent:PROTection:STATe?

Return parameters:

0|1

[SOURce:]CURRENT:PROTection:TRIPed?

This command is used to query the execution status of overcurrent protection. If "1" is returned, it indicates that the overcurrent protection circuit is triggered and the OCP status is not cleared. If "0" is returned, the OCP circuit is not triggered.

Order syntax:

```
[SOURce:]CURRENT:PROTection:TRIPed?
```

Return parameters:

```
0|1
```

[SOURce:]CURRENT:PROTection:CLEar

This command is used to clear the overcurrent protection status. After executing this command, the output current will return to the output state before the OCP protection occurs and the upper limit current value of the OCP overcurrent protection will remain at the previously set value. Please note that the external factor causing overcurrent protection should be excluded before sending this command.

Order syntax:

```
[SOURce:]CURRENT:PROTection:CLEar
```

Chapter8 Voltage Control Commands

VOLTage

{<volts>|MINimum|MAXimum|UP|DOWN|DEF}

This order is used to set the output voltage. No matter what the voltage range you select currently, the output voltage is subject to the newest setting value. Besides, MIN and MAX can be used as parameters. MIN represents 0V, MAX represents the max value of the voltage range. You may send VOLT? MIN or VOLT? MAX orders to quire the minimum and maximum voltage within the range. DEF represents default value, it also can be used to set value.

We can also send VOLT UP and VOLT DOWN orders to increase or decrease voltage, the stepping value should be set with order " VOLTage:STEP". If adjusted value has exceeded the voltage range, then error information will be return:error-222.

Order syntax:

[SOUR:]VOLTage[:LEVel][:IMMEDIATE][:AMPLitude] <NRf>

Parameters:

MIN to MAX

Unit:

V

*RST value:

MIN

Query syntax:

VOLTage? [MINimum|MAXimum]

Return parameters:

<NR2>

Example:

```
VOLT:STEP 0.01 //set the stepping value to be 0.01V
VOLT UP //enable the output voltage increase one time
VOLT:STEP 0.02 //set the stepping value to be0.02V
VOLT DOWN //enable the output value decrease one time
```

VOLTage:STEP {<value>|DEFault}

This order is used to service for VOLT UP and VOLT DOWN two orders. It can set the stepping value of voltage. Besides, VOLT:STEP? DEF order can inquire the stepping resolution of voltage of this unit. For example, the stepping setting value is 0.01, it represents 10mV.

Order syntax:

[SOURce:]VOLTage[:LEVel][:IMMediate]:STEP[:INCRement] <NRf>

Parameters:

MIN~MAX

*RST value:

the stepping resolution of voltage of this unit

Query order:

VOLT:STEP?

Return parameters:

<NR2>

VOLT:TRIG{<volts>|MINimum|MAXimum}

This order is used to set a voltage to be triggered. At first, this voltage value is saved and only when receiving a trigger signal will the power supply output with this voltage value. Sending order VOLTage will not affect the setting value in this order. Sending query order, unit will return the previous setting value. If customer does not utilize order **VOLT:TRIG** at the beginning, then the return parameters will be the value you set with order CURRent . CURR:TRIG? MAX or CURR:TRIG? MIN orders will let you know the max and min voltage you can set.

Order syntax:

[SOURce:]VOLTage[:LEVel]:TRIGgered[:AMPLitude] <NRf>

Parameters:

MIN to MAX

Unit:

V

Query syntax:

VOLT:TRIG? [MINimum|MAXimum]

Return parameters:

<NR2>

VOLT:PROTection {<volts>|MINimum|MAXimum}

This order is used to set the upper limit of over voltage protection point. If the output voltage value is higher than the upper limit of OVP, then we can assume that internal parts has been shorted. Query state register "OV" bit has been set. When power supply is protected, then we can through order VOLT:PROT:CLE to clear the OVP state.

Order syntax:

[SOURce:]VOLTage:PROTection[:LEVel] <NRf>

Parameters:

MIN to MAX

Unit:

V

Query syntax:

VOLT:PROT? { MINimum|MAXimum}

Return parameters:

<NR2>

VOLT:PROTection:STATe {0|1|OFF|ON}

This order is used to open or close OVP function i.e. to set the state of OVP.

Order syntax:

[SOURce:]VOLTage:PROTection:STATe

Parameters:

0|1|OFF|ON

Query syntax:

VOLTage:PROTection:STATe?

Return parameters:

0|1

VOLT:PROTection:TRIPed?

This order is used to inquire the execute state of OVP. If the return value is “1”, this represents that the OVP circuit has been triggered and the OVP state does not be cleared. If the return value is “0”, then it represents the OVP circuit does not be triggered.

Order syntax:

```
[SOURce:]VOLTage:PROTection:TRIPed?
```

Return parameters:

```
0|1
```

VOLT:PROTection:CLEar

This order is used to clear the state of OVP. After you executing this order, the output value will be restored to the previous output and the upper limit of OVP will be kept. Of course, before you sending this order, you should enable the output voltage lower than the upper limit of OVP. In addition, please note that making sure to remove the external power supply before you sending this order.

Order syntax:

```
[SOURce:]VOLTage:PROTection:CLEar
```

VOLT:LIMIT <volts>

This order is used to set the upper limit of the output voltage.

Order syntax:

```
[SOURce:]VOLTage:LIMIT[:LEVel] <NRf>
```

Parameters:

```
MIN to MAX
```

Unit:

```
V
```

Query syntax:

```
VOLTage:LIMIT?
```

Return parameters:

```
<NR2>
```

Chapter9 Control Commands

APPLy {<voltage value>|DEF|MIN|MAX} [, {<current value>|DEF|MIN|MAX}]

This order has combined two kinds of orders: VOLTage and CURRent. When sending this order to unit, power supply will output voltage and current according to the current setting of this order. Of course the precondition is the setting value is within the set range. If not, then a execution error will occur. You can also use DEF, MIN or MAX as the setting parameters. DEF represents factory setting. MIN will enable the voltage and current to be 0. MAX will enable the output to be the highest value in the range.

Order syntax:

[SOURce:]APPLy <NRf>

Parameters:

MIN to MAX

Unit:

V, A

Query syntax:

APPLy?

Return parameters:

<NR2>

ADDR

Address matching commands for multi-machine mode. When the command is sent, the power supply with the same address as that set by the command is connected to the PC, and the related operations of the power supply can be performed on the PC.

Order syntax:

ADDR <NR1>

Parameters:

0 to 30

Chapter10 Measurement Commands

MEASure:CURRent?

This order is used to measure and return output current value.

Order syntax:

MEASure[:SCALar]:CURRent[:DC]?

Return parameters:

<NR2>

FETCh:CURRent?

This order is used to read the latest current to be processed from sampling buffer. When you send this order, then our unit will communicate with PC, and sending the current data to PC. This order will not affect our unit's setting or trigger the measurement operation. It only need the nearest reading it can get, The returned readings will keep the old before it get a new data.

Order syntax:

FETCh:CURRent[:DC]?

Return parameters:

<NR2>

MEASure[:VOLTage]?

This order can inquire the current output voltage value.

Order syntax:

MEASure[:SCALar][:VOLTage][:DC]?

Return parameters:

<NR2>

FETCh[:VOLTage]?

This order is used to read the latest preprocessed voltages from sampling buffer.

Order syntax:

FETCh[:VOLTage][:DC]?

Return parameters:

<NR2>

MEASure:POWer?

This order is used to measure the current output power value.

Order syntax:

MEASure[:SCALar]:POWer[:DC]?

Return parameters:

<NR2>

FETCh:POWer?

This order can read the latest power value from the sampling buffer.

Order syntax:

FETCh:POWer[:DC]?

Return parameters:

<NR2>

MEASure:DVM?

This order is used read the latest measured value of DVM meter and return this value.

Order syntax:

MEASure[:SCALar]:DVM[:DC]?

Return parameters:

<NR2>

FETCh:DVM?

This order is used to read the latest data of DVM meter from the sampling buffer.

Order syntax:

FETCh:DVM[:DC]?

Return parameters:

<NR2>

Chapter11 List Commands

LIST:FUNCtion

This order is used to select the state of list mode.

Order syntax:

[SOURce:]LIST:FUNCtion<0|1>

Query syntax:

[SOURce:]LIST:FUNCtion?

Return parameters:

0|1

LIST:STEP

This command is used to set the total number of steps (1~100) of the List.

Order syntax:

LIST:STEP <NR1>

Query syntax:

LIST:STEP?

Return parameters:

NR1

LIST:VOLTage

This order is used to set the steps of list file and voltage of current step.

Order syntax:

[SOURce:]LIST:VOLTage <NRf>

Parameters:

MIN~MAX

Unit:

V

Example:

```
LIST:VOLT 1, 3V //set the first step's voltage to be 3V
```

Query syntax:

```
LIST:VOLTage?
```

Example:

```
LIST:VOLT? 1 //inquire the first step's voltage
```

Return parameters:

```
<NR2>
```

LIST:CURRent

This order is used to set the steps of list file and current value of current step.

Order syntax:

```
[SOURce:]LIST:CURRent <NRf>
```

Parameters:

```
MIN~MAX
```

Unit:

```
A
```

Example:

```
LIST:CURR 1, 2A // set the first step's current to be 2A
```

Query syntax:

```
LIST:CURRent?
```

Example:

```
LIST:CURR? 1 // inquire the first step's current
```

Return parameters:

```
<NR2>
```

LIST:TIMER

This order is used to set the steps of list file and delay time of current step. This order is used to set delay time of every steps.

Order syntax:

```
[SOURce:]LIST:TIMER
```


Parameters:

MIN~MAX|MIN|MAX

Unit:

S

Example:

LIST:TIME 1,3

Query syntax:

LIST:TIMEr?

Example:

LIST:TIME? 1

Return parameters:

<NR2>

LIST:SAVE

This order is used to save the list file to specified memory region.

Order syntax:

[SOURce:]LIST:SAVE <NR1>

Parameters:

0~9

Example:

LIST:SAVE 1 //save the edited list file to the first set of memory region.

LIST:LOAD

This order can recall the list file saved before from specified memory region. Sending query orders can inquire which group file you have recalled.

Order syntax:

[SOURce:]LIST:LOAD[:IMMediate] <NR1>

Parameters:

0~9

Example:

LIST:LOAD 1

Query syntax:

LIST:LOAD[:IMMediate]?

LIST:REPet

This order can set the repeat count of LIST steps.

Order syntax:

[SOURce:]LIST:REPet <NR1>

Query syntax:

LIST:REPet?

Chapter12 IEEE488.2 Commands

*CLS

This order can clean the register as follows:

- Standard event status register
- Quest condition register
- Status byte register

Order syntax:

*CLS

Parameter:

None

*ESE

This order can set the parameter of standard event enable register. Setting parameter can determine which bit value of standard event register is 1 and the byte will enable ESB of status byte register is 1.

Order syntax:

*ESE <NR1>

Parameter:

0~255

Reset value:

Consult *PSC order

Example:

*ESE 128

Quest syntax:

*ESE?

Return parameter:

<NR1>

Reference order:

*ESR? *PSC *STB?

***ESR?**

This order can read the value of standard event status register. After executing this order, standard event status register is reset. Bit definition of standard event status register is as the same as the standard event status enable register.

Quest syntax:

***ESR?**

Parameter:

None

Return parameter:

<NR1>

Reference order:

***CLS *ESE *ESE? *OPC**

***IDN?**

This order can read information about power supply. The parameter it returns contains 4 segments divided by comma.

Quest syntax:

***IDN?**

Parameter:

None

Return parameter:

<AARD>

For example:

ITECH Ltd, IT6922A, 0123456789AF, 1.00

***OPC**

When all orders before this order are executed, OPC is 1 for the standard event status register. Sending query order will return 1 to output buffer.

Order syntax:

***OPC**

Parameter:

None

Quest syntax:
***OPC?**
Return parameter:

<NR1>

*PSC

This order control if power supply send a query or not when it is reset.

1 OR ON:When power supply is reset, operation event enable register, query event enable register and standard event status register are all reset.

0 OR OFF:The data of status byte register, operation event enable register, quest event enable register and standard event status enable register is stored in nonvolatile register, and is recalled when power supply is reset.

Order syntax:
***PSC <bool>**
Parameter:

0|1|ON|OFF

Quest syntax:
***PSC?**
Return parameter:

0|1

Reference order:
***ESE *SRE STAT:OPER:ENAB STAT:QUES:ENAB**

*RST

This order reset the power supply to default setting.

CURR	CURR:STEP	CURR:TRIG	CURR:PROT
DISP ON	OUTP OFF	TRIG:SOUR BUS	VOLT 0V
VOLT:STEP	VOLT:TRIG	VOLT:PROT	VOLT:PROT:STAT
ON			

Order syntax:
***RST**

Parameter:

None

***SRE <enabled value>**

This order can set the parameter of standard event register. When query status bit enable register, the power will return a decimal number, this number is the binary weighted of enable register.

Order syntax:***SRE <NRf>****Parameter:**

0~255

Reset value:

Consult *PSC order

Example:***SRE 128****Quest syntax:*****SRE?****Return parameter:**

<NR1>

Reference Order:***ESE *ESR? *PSC *STB?*****STB?**

This order can read the data from status byte register. This order is similar to a statistics of series, but the equivalent of another instrument orders, it returns the value the same as series statistics, but after this order is executed, the bit 6 value of status byte register is cleared, while the status bit will not be cleared when system statistics implemented.

Quest syntax:***STB?****Parameter:**

None

Return parameter:

<NR1>

Reference order:***CLS *ESE *ESR*****TRG**

When the trigger mode of the power supply is BUS order trigger mode, the order will Generates a trigger signal. The function is the same as TRIGger[:IMMediate]

Order syntax:***TRG****Parameter:**

none

Reference order:**TRIG TRIG:SOUR*****SAV**

This order can save the parameters of power supply to register. These parameter contains:

CURR	CURR:STEP	CURR:TRIG	CURR:PROT	DISP
OUTP	TRIG:SOUR			
VOLT	VOLT:STEP	VOLT:TRIG	VOLT:PROT	
VOLT:PROT:STAT				

Order syntax:***SAV<NRf>****Parameter:**

1~72

Example:***SAV 3****Reference order:*****RCL**

***RCL**

This order can recall the parameter you saved before from the register.

Order syntax:

***RCL<NRf>**

Parameter:

1~72

Example:

***RCL 3**

Reference order:

***SAV**

***TST?**

This command is used to query the self-test by the instrument. 0 indicates that self-test succeeds; other Arguments indicate self-test fails. In addition, in case of failure, an error information will be generated to describe failure reason.

Query syntax:

***TST?**

Parameters:

None

Returns:

<NR1>

Contact Us

Thanks for purchasing ITECH products. In case of any doubts, please contact us as follows:

1. Visit ITECH website:www.itechate.com
2. Select the most convenient contact method, for further information.